

401 Legend Lane • Peculiar, MO 64078



Tech Line (816) 758-4504

800-334-7240

Fax (816) 758-4512


## 33 - 34 FORD REAREND MOUNTING KIT

When assembling bars, lay one bar over the other and line up all 3 hook-up points with bolts.

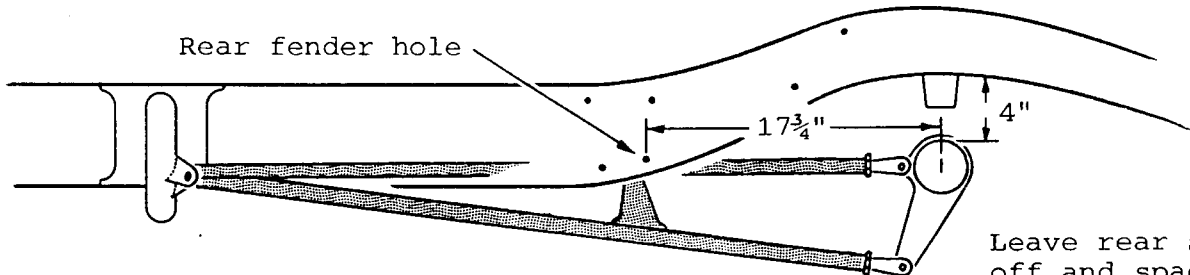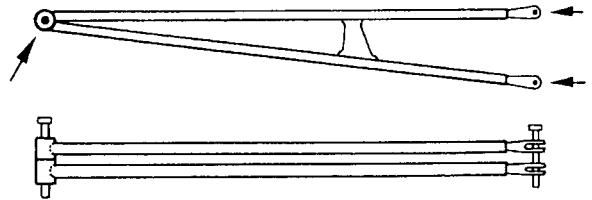

Center of rearend is  $17\frac{3}{4}$ " back from center of rear fender hole in side rail. Position rearend and work forward to locate tube crossmember and boxing plates.

Leave rear spring off and space rearend 4" down from frame rail.

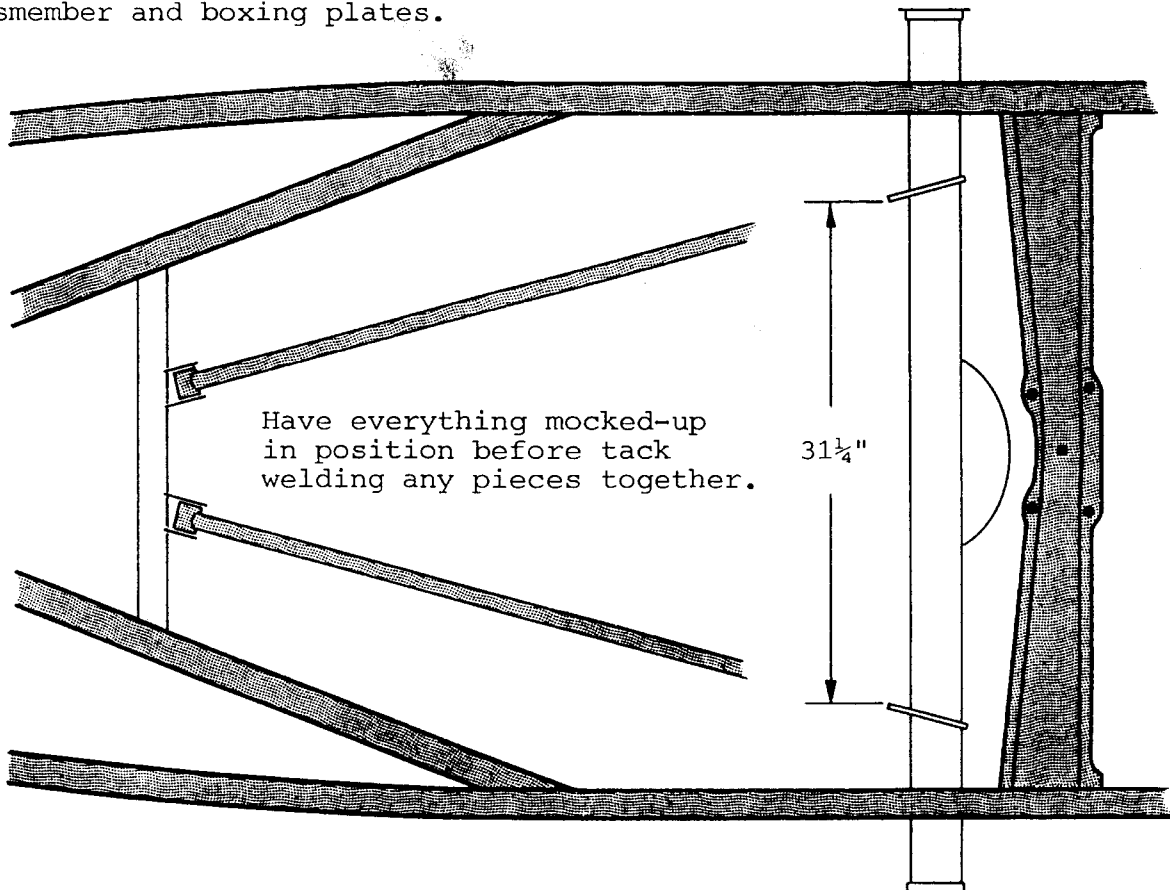

Have everything mocked-up in position before tack welding any pieces together.

$31\frac{1}{4}$ "