


## INSTALLATION INSTRUCTIONS FOR '33-'34 BIG BLOCK CHEVY MOTOR MOUNTS.

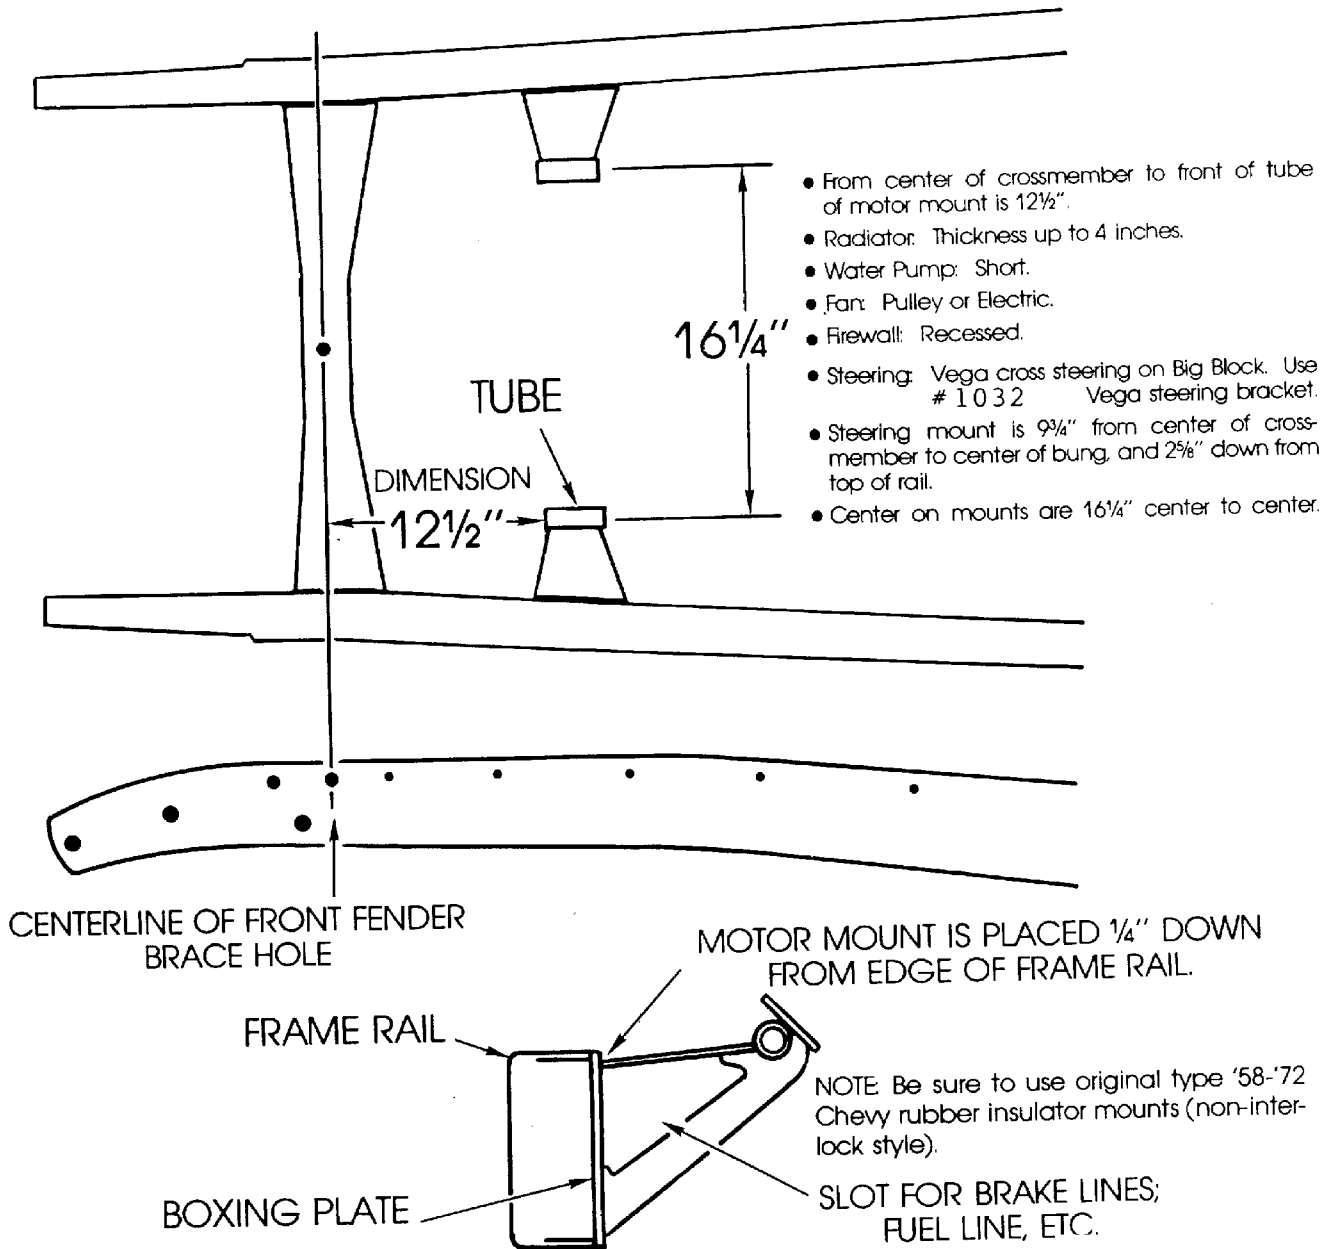

PLEASE NOTE: Read this information before installing mounts.

There are several things to take into consideration before positioning the motor mounts on the frame. First, these mounts are designed for repro-rails that have been boxed inside. If rails are boxed outside, you will need to grind mounts. Also, it would be helpful for you to use a "dummy block" and transmission case to set up location of transmission mount on the frame. When using these mounts you should use part # 1032 bracket for Vega cross-steering. To locate steering bracket, measure 9 3/4" from center of crossmember back, then down from top of rail 2 5/8" to center of bung, which acts as a self-locator for the steering box. Radiator — thickness up to 4 inches. Water pump — short. Fan — pulley or electric. Firewall — must be recessed.