
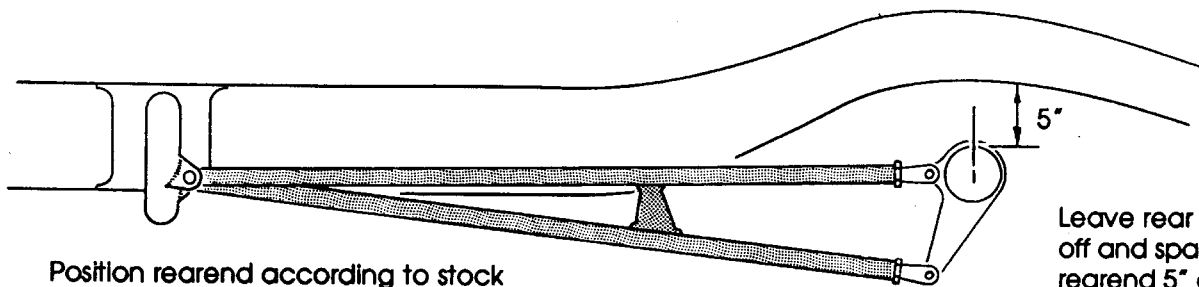


Instructions for kit #6011


# '42-'48 FORD LADDER BAR KIT

When assembling bars, lay one bar over the other and line up all 3 hook-up points with bolts.

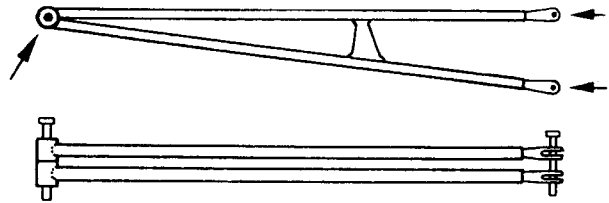

Position rearend according to stock hole shown in frame rail (this hole is either square or round depending on year of car). Slip tube crossmember into x-member and assemble bars and rearend plates.

Leave rear spring off and space the rearend 5" down from the frame rail.

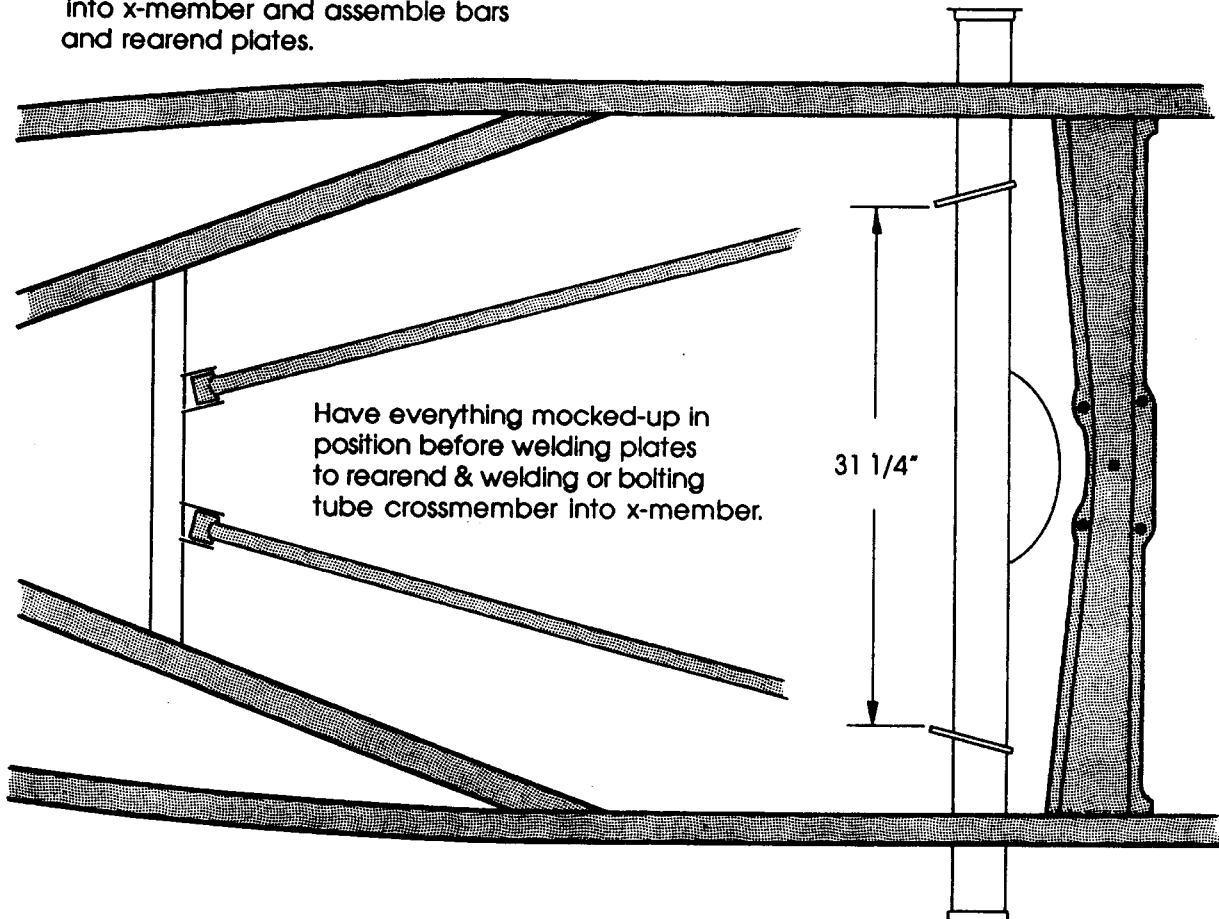

Have everything mocked-up in position before welding plates to rearend & welding or bolting tube crossmember into x-member.

31 1/4"