Instructions for kit #5011

'35-'40 FORD

LADDER BAR KIT

Pete & Jake's Hot Rod Parts • 401 Legend Lane •
Peculiar, MO 64078 • Tech line 800-334-7240



When assembling bars, lay one bar over the other and line up all 3 hook-up points with bolts.



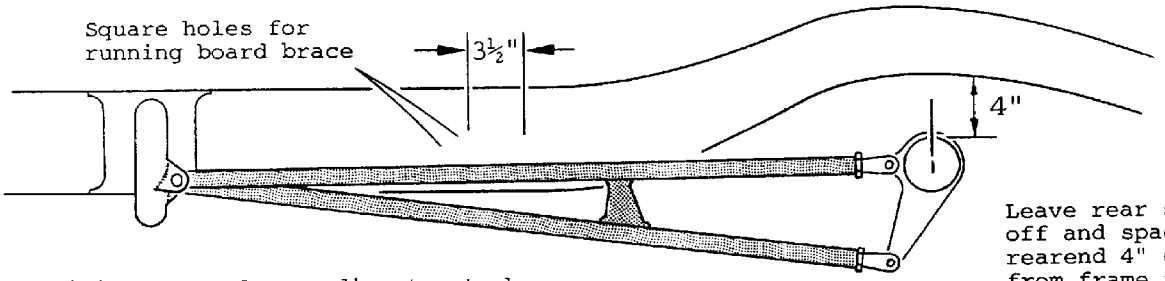

Leave rear spring off and space the rearend 4" down from frame rail.

Position rearend according to stock hole shown in frame rail (this hole is either square or round depending on year of car.) Slip tube crossmember into X-member and assemble bars and rearend plates.

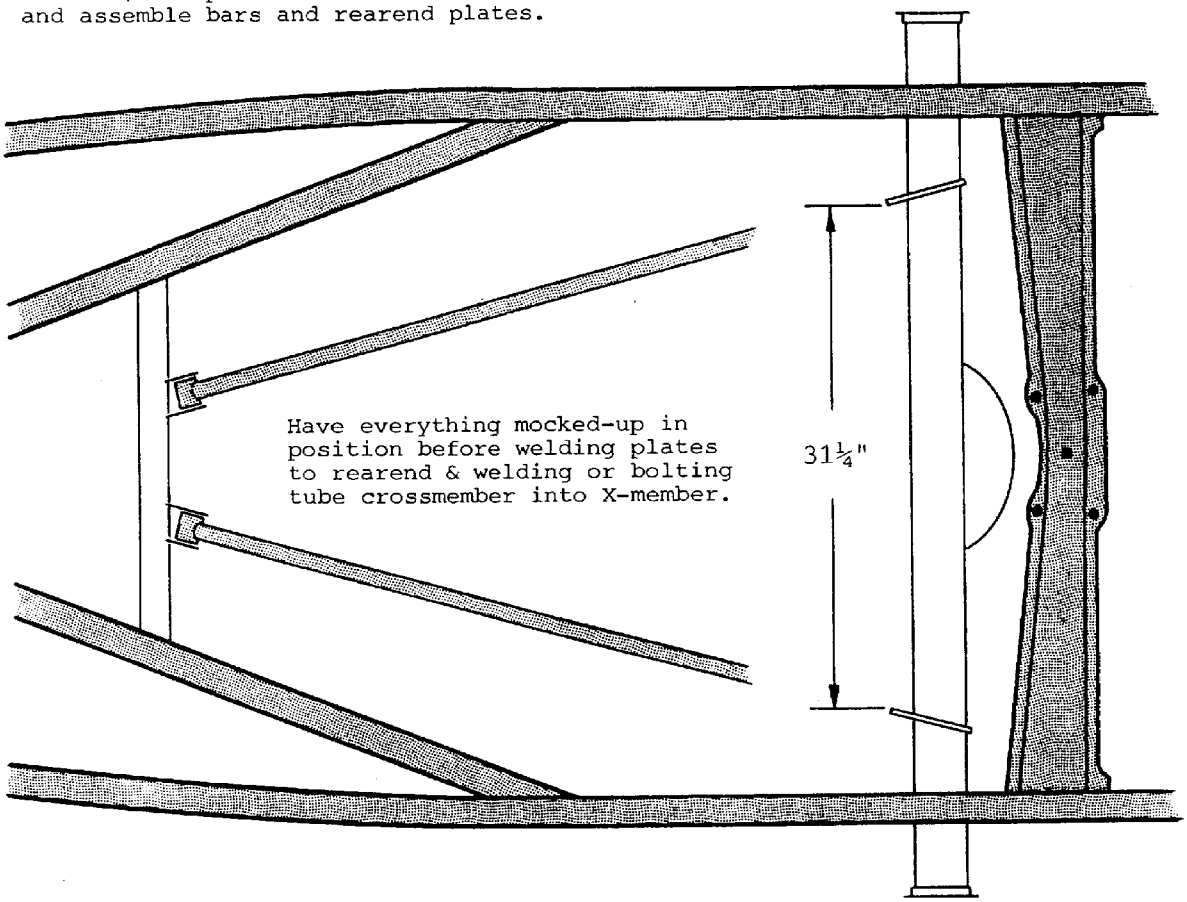

Have everything mocked-up in position before welding plates to rearend & welding or bolting tube crossmember into X-member.